

ADCRAFT®



IND-WOK208V Induction Cooker

This manual contains important information regarding your *Admiral Craft* unit. Please read this manual thoroughly prior to equipment set-up, operation and maintenance. Failure to comply with regular maintenance guidelines outlined in this manual may void the warranty. MUST READ!!!

WARNINGS

- This unit is intended to be used with induction ready cookware only
- Do not plug into an electrical with wet hands EVER
- Plug only into a 3-hole grounded electrical outlet
- Do not use this unit for anything other than intended use
- Ensure that the designated power supply is adequate for continual usage and the voltage is correct
- Do not use if unit has a damaged cord or plug, in the event the appliance malfunctions, or has been damaged in any manner
- Any incorrect installation, alterations, adjustments and/or improper maintenance can lead to property loss and injury. All repairs should be done by authorized professionals only
- Keep children and animals away from unit
- Do not operate unattended
- Always use on a firm, dry and level surface at least 12” from walls or any other obstruction
- Do not use with an empty pot or overheat
- Do not place metallic objects such as knives, forks, spoons, lids, cans or aluminum foil on plate
- Do not use on carpet, tablecloth or any other low-heat-resistant surface
- Do not place the cooker close to the objects which are affected by magnets, such as: radios, televisions, credit cards
- Unplug appliance when it is not in use
- Do not use outdoors
- Allow unit to fully cool and unplug before attempting to move or clean
- Pressing the on/off button at any time during operation will shut the unit off
- There is an automatic shutoff which will take effect after 2 hours of non-operation

HOW TO USE

1. Place suitable cookware on the induction cooker plate. Connect the plug to an appropriate socket. Once connected, the ON/OFF light will display, indicating the power is connected normally.
2. After pressing ON/OFF the POWER light will display, indicating that the induction cooker is heating up; the default power heating level is 2000W. Adjust the power from 500W-3000W by turning the knob.
3. After pressing the FUNCTION button, the function between POWER, TEMP and TIMER can be changed. The selected light will display. Temperature can be adjusted from 140°F up to 460°F by turning the knob. The maximum temperature of the glass plate is 460°F. If overheating, the unit will shut off automatically.
4. Adjust the time from 0 minutes to 170 minutes by turning the knob on the Time function.
5. When pressing ON/OFF during usage, the induction cooker will stop working immediately. Once not in use, the fan will cool down the unit for one minute, and then will be off.
6. The induction cooker will shut off automatically if there is no operation within 2 hours.

CLEANING - NOTE: To maintain cleanliness and increase service life, this induction cooker should be cleaned daily. Do not immerse the unit in water or any other liquid. If liquid enters the unit it may cause a short circuit or electrical shock

1. Before cleaning or attempting to move, unplug and let the unit cool completely
2. Wipe the entire unit with a clean soft cloth and mild soap
3. To avoid damage, do not use abrasive cleaners or scouring pads
4. Use a vacuum cleaner to clean any dirt from the air intake and exhaust valve

Troubleshooting

Error Message	Cause	Solution
E01	The cooker has become too hot (e.g. due to blocked ventilation slots).	Clear vents, let cooker cool down before restarting. If error message continues contact retailer.
E02	Overheating-protection was activated and the cooker has switched off.	Remove cookware from cooker and let unit cool down before restarting. Also Please check whether the pan is suitable for induction cooker
E03	Temporary voltage overload.	Let cooker cool down before restarting.

ACE Electrical Equipment One Year Warranty

ACE warrants its equipment against defects in materials and workmanship, subject to the following conditions:

This warranty applies to the original owner only, and is not assignable.

ACE Electrical Equipment is warranted for one year, effective from the date of purchase by the original owner. A copy of the original receipt or other proof of purchase is required to obtain warranty coverage.

Should any product fail to function in its intended manner under normal use within the limits defined in this warranty, at ACE's discretion, such product will be repaired, replaced with a refurbished unit, or replaced with a new unit by ACE, after defective unit has been inspected and defect has been confirmed. ACE does not assume any liability for extended delays in replacing any item beyond its control. This warranty does not apply to rubber and non-metallic synthetic parts where usage, wear, or lack of preventative maintenance may create abnormal replacement rates, and these parts are excluded from this limited warranty.

This warranty covers products shipped into the 48 contiguous United States, Hawaii, and metropolitan areas of Alaska and Canada. Warranty coverage on products used outside the 48 contiguous United States, Hawaii and metropolitan areas of Alaska and Canada may vary. Contact ACE for details at 1-800-223-7750

The following conditions are not covered by warranty:

- Equipment failure relating to improper installation, improper utility connection or supply and problems due to improper ventilation.
- Equipment that has not properly been maintained, damage for improper cleaning, and water damage to controls.
- Equipment that has not been used in an appropriate manner, or has been subject to misuse, neglect, abuse, accident, alteration, negligence, damage during transit, delivery or installation, fire, flood, riot, or act of God.
- Equipment that has the model number or serial number removed or altered.
- Equipment on which the security seal has been broken.

If the equipment has been changed, altered, modified, or repaired without express written permission from ACE, then the manufacturer shall not be liable for any damages to any person or to any property, which may result from the use of this equipment thereafter.

This equipment is intended for commercial use only. Warranty is void if equipment is used in other than a commercial application.

In the event your repair is not covered under the stated warranty provisions, parts are available by calling 1-800-223-7750. Equipment not covered by repair should be picked up from our warehouse facility within 10 business days from notification date. Any and all arrangements and expenses for the return of this merchandise is your responsibility.

“THE FOREGOING WARRANTY IS IN LIEU OF ANY AND ALL WARRANTIES EXPRESSED OR IMPLIED INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR PARTICULAR PURPOSES AND CONSTITUTES THE ENTIRE LIABILITY OF ACE. IN NO EVENT DOES THE LIMITED WARRANTY EXTEND BEYOND THE TERMS STATED HEREIN.”

VER40111