

**DAILY START-UP:**

SCAN TO WATCH START-UP VIDEO




**1 BEFORE START-UP**  
Make sure all (6) components are clean and installed properly in the machine.  
*Note: See Steps 3, 4 & 6 under Daily Cleaning for assembly instructions.*




**2 CHECK CHEMICAL BOTTLE LEVELS**  
Make sure you have sufficient chemicals for machine operation.



**3 CLOSE THE DOOR AND PRESS THE POWER BUTTON**  
The power button LED light will flash until the fill process is complete. The LED light will become solid upon completion and ready to operate.

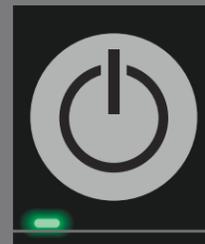

**4 MACHINE IS READY WHEN THE START BUTTON LED LIGHT IS SOLID.**  
Open the door and slide a loaded rack into the machine.

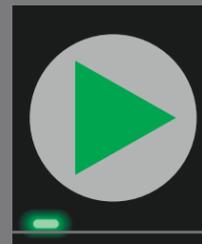

**5 CLOSE DOOR & PRESS THE START BUTTON TO BEGIN WASH CYCLE**  
Cycle light will flash while the cycle is running and become solid when the cycle is complete.  
*For extended wash cycle, press Start button again within 10 seconds of initiating cycle. "Start" and "Menu" button LED lights will flash while extended cycle is running.*



**6 OPEN THE DOOR AND REMOVE THE RACK**  
Allow the ware enough time to dry before storing.



**DAILY CLEANING:**

SCAN TO WATCH DAILY CLEANING VIDEO



**1 DRAIN THE MACHINE**  
Press and hold the Power/Drain Button (for 3 seconds). LED Light will flash. During draining, the display will show "drA in".




**2 MACHINE WILL TURN OFF AFTER DRAINING**  
At the end of the draining cycle, the machine switches off automatically.



**3 REMOVE UPPER AND LOWER WASH/RINSE ARMS**  
Squeeze the two side buttons on the center hub; pull up (or down) to remove arm. *Make sure all wash/rinse nozzles are free from obstructions to ensure proper water flow.*



**4 REMOVE AND CLEAN ALL STRAINERS**  
Remove any heavy food residues from strainer pans (A, B, C) and pump strainer (D).

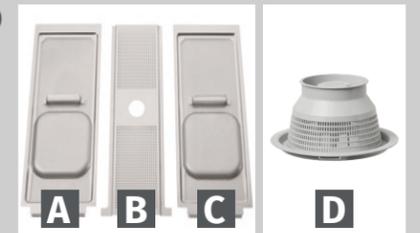

**5 WIPE DOWN MACHINE INTERIOR AND EXTERIOR WITH A DAMP CLOTH**



**6 REPOSITION ALL STRAINERS AND WASH/RINSE ARMS**  
Allow machine interior to air out overnight. *After installing (D), install strainer pan (B), followed by (A) and (C).*



**OPERATION TIPS:**

SCAN TO WATCH DOs AND DON'Ts VIDEO



**GET THE MOST OUT OF YOUR CENTERLINE DISHWASHER**




**PRE-SCRAP DISHES**  
Make sure to remove large food particles and debris before loading a rack into the machine.



**USE ONLY COMMERCIAL DETERGENTS AND SANITIZERS** Do not use any other chemicals with the dishwasher.



**DO NOT OVERLOAD RACK**  
Load only one rack per cycle, and follow proper racking guidance.

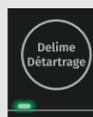

**DELIME THE MACHINE**  
When the Delime button LED is flashing, deliming is recommended.

SCAN TO WATCH DELIME INSTRUCTIONAL VIDEO



**PROPER RACKING WILL PROVIDE THE BEST CLEANING RESULTS.**

