


# Winco S/S SOUP WARMER

## **CLEANING & MAINTENANCE**

**REGULAR CLEANING WILL HELP PROLONG THE SOUP KETTLE'S LIFE AND PRESERVE ITS APPEARANCE.**

- Always unplug the kettle when not in use, when filling or when cleaning.
- Spilled food should be removed immediately from painted exterior surfaces and the top collar.
  - ◆ *Use a damp soapy cloth.*
  - ◆ *Do not use harsh or abrasive chemicals or scouring agents.*
- The bain marie insert and lid are dishwasher safe.
- Never immerse the appliance in water.

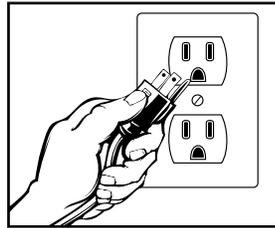

# Winco S/S SOUP WARMER



ESW-70

## **Use & Care Manual**

*Kindly read and keep these instructions.  
Product for indoor use only.*

# Winco S/S SOUP WARMER

## SPECIFICATIONS

Model #: ESW-70

Capacity: 10 Quarts

Electrical: 120V, 60 Hz; 400W



*Read and understand all instructions before using the soup warmer.*

**CAUTION! SURFACE WILL BE HOT!**

## WARNINGS

- This appliance is designed for commercial use only.
- This appliance must be placed on a level surface.
- Do not leave this appliance unattended while it is in use.
- Never immerse the appliance in water.
- Do not operate the kettle while it is empty.
- Do not overfill the appliance with water.
- Never move or carry the kettle when it is “ON” or if it is full of hot liquids.
- Do not attempt to repair or replace the power cord if it becomes damaged. Contact a certified service agent or call our customer service number: 1-888-946-2682
- Be careful not to touch any hot surfaces. Make sure the power cord does not come in contact with any hot surfaces.

# Winco S/S SOUP WARMER

## OPERATION

### **CAREFULLY UNPACK THE SOUP KETTLE WARMER AND INSPECT IT FOR DAMAGE.**

- Place the warmer on a solid, level surface.
- Use with wet heat only.
  - ◆ Add 20 oz. (0.6 liters) of water to the kettle before placing the bain marie insert into the warmer.
  - ◆ Never over-fill with water. Use the waterline marks at the base of the kettle. Under no circumstances should the bain marie insert float, even when empty. **Do Not** exceed max level.
  - ◆ Remove any excess water immediately.
- Turn the warmer on. The indicator light will glow, showing that the unit is on.
- Adjust the temperature control dial to correct setting:
  - ◆ Settings 8-12 are designed for initial warm-up
  - ◆ Normal control settings range from 1-8
  - ◆ Once the kettle has reached the desired temperature, adjust the temperature control dial to a lower setting. It is recommended that the lowest possible setting that maintains food-safe serving temperatures be used.
- Always keep the hinged lid attached and closed when not serving.

**NOTE: This soup kettle warmer is not designed to cook soups or sauces, nor is it designed to rethermalize cold or frozen products.**