


ADCRAFT™

Electric Soup Warmer

Model SK-500W

Instructions for the Electric Soup Warmer
 Specifications—Capacity : 11.4 Quart (10.8 liters)
 Voltage : 110V - 120V AC
 475W-560W
 Weight : 6.2kgs
 Dimension : 37cm high 40.5cm dia

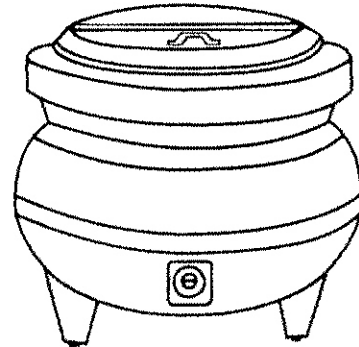

Operating and Maintenance:

- Plug unit into correct electrical outlet.
- Add 0.8l of water between the stainless steel liner and the internal Aluminum container. Never overfill with water and under no circumstances should the stainless steel liner float up, even when empty. Remove excess water immediately.
- The temperature control should be set between 1 and 5 for keep warm function. For cooking use high (6) setting.
- The cooking feature is for slow-cooking/simmering purposes. For faster preparation please heat up the soup in a separate pot on the stove first, then transfer the soup to the stainless steel liner.
- Always unplug from the electrical outlet after use.
- Always keep the removable hinged lid attached and in the closed position when not serving.
- Never move or carry the kettle when the unit contains hot soup or liquid.
- Spilled food should be removed immediately from all exterior surfaces. The body exterior and top collar should be cleaned with a damp cloth.
- Make sure the unit is unplugged while not in use, filling soup or water and being cleaned.

Important—

- Never Immerse Kettle In Water.

Warning—

- This Appliance Must Be Earthed
- Do Not Operate Kettle Empty

