



Instruction Manual

Lil' Maxx













Model No. 2389 and 2389EX





GOLD MEDAL[®] PRODUCTS CO.



10700 Medallion Drive, Cincinnati, Ohio 45241-4807 USA

SAFETY PRECAUTIONS

	<div data-bbox="824 304 1073 346">  DANGER </div> <p>Machine must be properly grounded to prevent electrical shock to personnel. Failure to do so could result in serious injury, or death. DO NOT immerse any part of this equipment in water. DO NOT use excessive water when cleaning. Keep cord and plug off the ground and away from moisture. Always unplug the equipment before cleaning or servicing. Make sure all machine switches are in the OFF position before plugging the equipment into the receptacle.</p> <p>008_051514</p>
	<div data-bbox="824 686 1073 728">  DANGER </div> <p>Improper installation, adjustment, alteration, service, or maintenance can cause property damage, injury, or death. Any alterations to this equipment will void the warranty and may cause a dangerous condition. This appliance is not intended to be operated by means of an external timer or separate remote-control system. NEVER make alterations to this equipment. Read the Installation, Operating, and Maintenance Instructions thoroughly before installing, servicing, or operating this equipment.</p> <p>014_020416</p>
	<div data-bbox="816 1043 1081 1085">  WARNING </div> <p>To avoid burns, DO NOT touch the kettle or any heated surface. DO NOT place or leave objects in contact with heated surfaces.</p> <p>013_092414</p>
	<div data-bbox="816 1253 1081 1295">  WARNING </div> <p>ALWAYS wear safety glasses when servicing this equipment.</p> <p>010_010914</p>
	<div data-bbox="816 1453 1081 1495">  WARNING </div> <p>No user serviceable parts inside. Refer servicing to qualified service personnel.</p> <p>011_051514</p>
	<div data-bbox="816 1652 1081 1694">  WARNING </div> <p>Read and understand operator's manual and all other safety instructions before using this equipment. To order copies of the operator's manual go to gmpopcorn.com or write to Gold Medal Products Co., 10700 Medallion Drive, Cincinnati, OH 45241 USA 1-(800)-543-0862</p> <p>022_060215</p>

SAFETY PRECAUTIONS (continued)

	<div data-bbox="813 302 1083 344"> WARNING</div> <p>DO NOT allow direct contact of this equipment by the public when used in food service locations. Only personnel trained and experienced in the equipment operation may operate this equipment. Carefully read all instructions before operation.</p> <div data-bbox="1313 485 1409 501">012_010914</div>
---	--

	<div data-bbox="813 567 1083 609"> WARNING</div> <p>This machine is NOT to be operated by minors.</p> <div data-bbox="1313 688 1409 705">007_010914</div>
---	---

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Note: Improvements are always being made to Gold Medal's equipment. This information may not be the latest available for your purposes. It is critical that you call Gold Medal's Technical Service Department at 1-800-543-0862 for any questions about your machine operations, replacement parts, or any service questions. (Gold Medal Products Co. does not assume any liability for injury due to careless handling and/or reckless operation of this equipment.)

INSTALLATION INSTRUCTIONS

Inspection of Shipment

After unpacking, check thoroughly for any damage which may have occurred in transit. Claims should be filed immediately with the transportation company. The warranty does not cover damage that occurs in transit, or damage caused by abuse, or consequential damage due to the operation of this machine, since it is beyond our control (reference warranty in back of manual).

Manual

Read and understand the operator's manual and all other safety instructions before using this equipment. To order copies of the operator's manual go to gmpopcorn.com or write to Gold Medal Products Co., 10700 Medallion Drive, Cincinnati, OH 45241 USA 1-(800)-543-0862.

Model Description

2389: Lil' Maxx 8 oz. Popper

2389EX: Export Lil' Maxx 8 oz. Popper

This appliance is intended to be used in household and similar applications such as staff kitchen areas in shops, offices and other working environments; farm houses; by clients in hotels, motels, bed and breakfast or other residential type environments.

Items Included with this Unit



Setup

This unit has been tested at the factory.

1. Remove all packaging and tape prior to operation.
2. Place the unit on a sturdy, level base.
3. The popper unit has 4 glide feet preinstalled at the factory (see image below). Install a rubber Crutch Tip on each of the 4 glide feet. Firmly push the crutch tip over the glide until it covers the glide entirely.
4. The door knobs are shipped facing the inside of the machine. Readjust the knobs to face the outside of the machine.
5. Carefully install the light bulb (do not over-tighten) into the lamp holder located inside the cabinet interior. Make sure the unit is OFF and unplugged before installing or changing the bulb (reference the Electrical Requirements section).





Electrical Requirements

The following power supply must be provided:

2389: 120 V~, 1250 W, 60 Hz



2389EX: 230 V~, 1250 W, 50 Hz

	 DANGER
	<p>Machine must be properly grounded to prevent electrical shock to personnel. Failure to do so could result in serious injury, or death. DO NOT immerse any part of this equipment in water. DO NOT use excessive water when cleaning. Keep cord and plug off the ground and away from moisture. Always unplug the equipment before cleaning or servicing. Make sure all machine switches are in the OFF position before plugging the equipment into the receptacle.</p> <p>008_051514</p>

Your electrician must furnish sufficient power for proper machine operation. We recommend this equipment be on a dedicated and protected circuit. Failure to wire properly will void the warranty and may result in damage to the machine. It is Gold Medal Products Co.'s recommendation that this machine be plugged directly into a wall outlet. The use of extension cords is not recommended due to safety concerns, and may cause sacrificed and/or reduced performance. Make sure cord is located to prevent a trip hazard or unit upset.

Before You Plug In Machine

1. Make sure all machine switches are in the OFF position before plugging the equipment into the receptacle.
2. Make sure the wall outlet can accept the grounded plugs (where applicable) on the power supply cord.
3. The wall outlet must have the proper polarity. If in doubt, have a competent electrician inspect the outlet and correct if necessary.
4. DO NOT use a grounded to un-grounded receptacle adapter (where applicable).
5. Install the unit in a level position.

	 CAUTION
	<p>If the supply cord is damaged, it must be replaced by Gold Medal Products Co., its service agent or similarly qualified persons in order to avoid a hazard.</p> <p>039_080614</p>

OPERATING INSTRUCTIONS

Controls and Their Functions

KETTLE HEAT SWITCH


Two position, ON/OFF lighted rocker switch - supplies power to the heating element in the kettle. The green switch light ON indicates there is power to the kettle heating element.

KETTLE MOTOR SWITCH

Two position, ON/OFF lighted rocker switch - supplies power to the kettle agitator motor. The Kettle Motor Switch **MUST** be ON at all times when there is popcorn (popped or unpopped) in the kettle.

LIGHTS/WARMER SWITCH

Two position, ON/OFF lighted rocker switch - supplies power to the interior cabinet light and corn pan heat element.

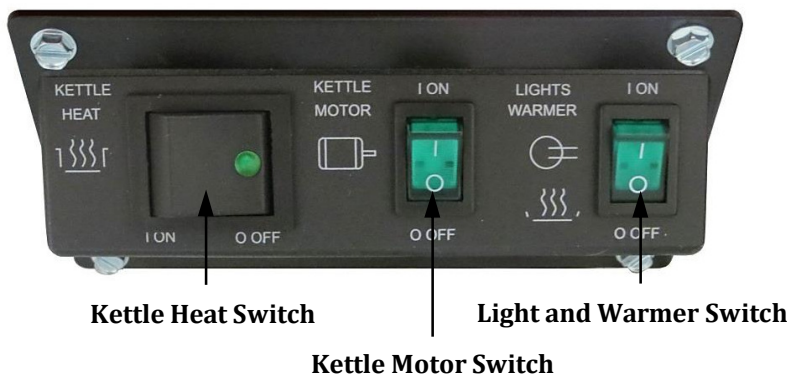



Popping Corn

This section describes instructions for popping Standard (salted popcorn).

Amount of Popcorn and Oil

Your new popper is equipped with a corn, salt, and oil measure. We recommend flavored and colored coconut oil. Popcorn popped in coconut oil stays fresh longer and does not leave black deposits in your kettle like other oils. Use only top quality, fresh popcorn from reputable suppliers.

Ingredient amounts for popping Standard Popcorn:

Kettle Size	Popcorn Charge	Oil Charge	Flavacol (Salt)
8 oz.	8 oz. (237 ml)	1/3 cup (79 ml)	3/4 Tblsp. (10cc)



For best results use Mega-Pop® 8 oz. premeasured pouches (Item# 2838).

Popping Standard (Salted) Popcorn

1. Turn the Lights/Warmer, Kettle Heat and Kettle Motor Switches ON.
2. To determine when the kettle is ready to pop corn (about 4 minutes), test pop three kernels of corn and one ounce (30 ml) of popping oil. When the kernels pop, the kettle is ready for use.
3. Lift the kettle lid and load the Mega-Pop® premeasured popcorn and oil pouch into kettle, or pour in the popcorn and Flavacol, then add oil in the premeasured amounts specified above. Close lid.
4. When the corn has finished popping, gently dump the popcorn.
5. On the final kettle of corn, turn the Kettle Heat Switch OFF just as the lids are forced open by the popping corn. This procedure saves electricity, since the kettle has plenty of heat, and helps eliminate smoke/odor from any oil residue that remains after popping has stopped.
6. When finished popping, make sure KETTLE HEAT and KETTLE MOTOR switches are turned OFF.

NEVER LEAVE THE HEAT ON WHEN YOU ARE NOT POPPING CORN!

Care and Cleaning

	<div data-bbox="824 302 1073 344"> DANGER</div> <p>Machine must be properly grounded to prevent electrical shock to personnel. DO NOT immerse in water. Always unplug the equipment before cleaning or servicing.</p> <p data-bbox="1317 453 1409 470">025_020314</p>
---	--

	<div data-bbox="813 535 1081 577"> WARNING</div> <p>To avoid serious burns, DO NOT touch the kettle while it is hot!</p> <p data-bbox="1317 653 1409 669">028_082715</p>
---	--

Good sanitation practice demands that all food preparation equipment be cleaned regularly (only use non-toxic, food grade cleaners). A clean looking, well-kept machine is one of the best ways of advertising your product.

Note: It is extremely important to follow all of the cleaning procedures, otherwise parts damage and equipment failure will result. The warranty does not cover parts that are damaged due to improper cleaning.

Daily Kettle Cleaning Instructions

CAUTION: A hot kettle will cause burns if you touch it with your hand. Allow kettle to cool at least 1 hour before attempting to clean. **DO NOT** use ice or water to cool down a hot kettle! Severe kettle damage will result!

1. When cool, wipe the **outside** of the kettle with a clean, soft cloth. **DO NOT** use oven cleaners or abrasive materials as they will damage the kettle.
2. Every night, mix Gold Medal's Heat'n Kleen solution (Item No. 2095), 2 tablespoons per gallon of water. It is not necessary to use the entire gallon at once; only use enough to fill the kettle 1/2 inch deep.
3. Turn the kettle heat ON. When the water starts to boil, turn the kettle heat OFF.
4. Allow to cool for at least 1 hour, then dump the solution into a bucket and wipe the inside of the kettle with a clean cloth. Make sure all of the solution goes into the bucket; do not spill any in the interior of the machine.

For an extra dirty kettle, the process may be repeated; or, after turning the kettle heat OFF, allow solution to sit in the kettle overnight. The next morning, dump the solution into a bucket and wipe the inside of the kettle with a clean cloth.

5. With the unit OFF and unplugged, wipe the kettle lead cord with a clean SLIGHTLY damp cloth. **DO NOT get moisture into the kettle lead-in cord, severe damage will result.**



Daily Unit Cleaning Instructions

1. With the machine OFF, unplug the unit and allow it to cool before attempting to clean.
2. Make sure to clean all pans/accessories in order to sanitize them before each use.
3. Take a clean, SLIGHTLY damp cloth and wipe excess grease from the glass and cabinet.
4. Wipe the stainless steel parts with a clean cloth and cleaner designed for stainless steel, such as Gold Medal Watchdog Stainless Cleaner (Item No. 2088).

DO NOT use oven cleaners or abrasive materials as they will damage parts of the machine.

5. Clean the glass panels with glass cleaner. Gold Medal Watchdog Glass Cleaner (Item No. 2588) is recommended.

Ammonia cleaners will damage the plastic doors. Use only non-ammonia cleaners, such as Gold Medal Watchdog Glass Cleaner (Item No. 2588).


Filter Cleaning Instructions

Your popcorn machine is equipped with an efficient and durable filtration system. The filter should be cleaned every 1-2 weeks to maintain maximum efficiency.

Follow the steps below for proper filter cleaning:


Step 1:

The filter is located on the inside of the popcorn machine directly above the popping kettle.

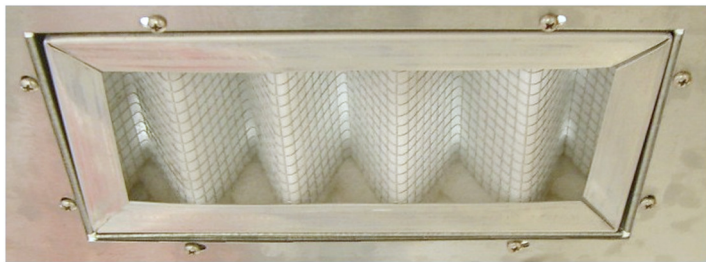


Step 2:

Remove the filter by gripping the filter itself and pulling straight down.

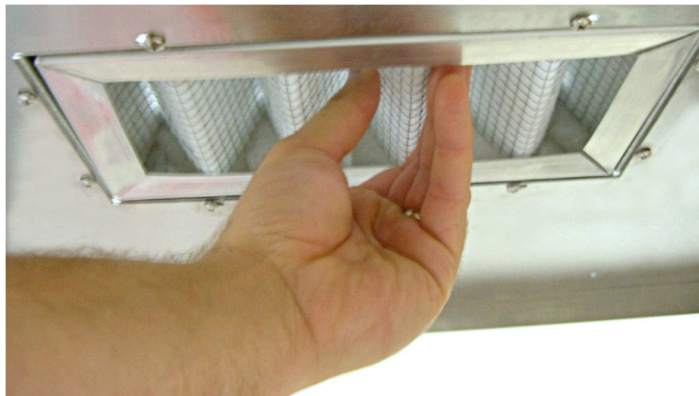

Step 3:

Clean the filter in warm soapy water and allow to dry overnight. Replace the filter by putting it into the slot and pushing upward. Make sure the filter frame is flush with the roof of the machine (as shown above).

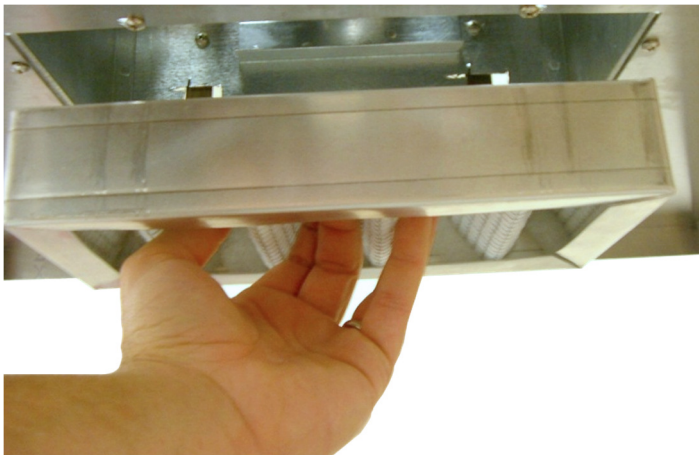









Troubleshooting



Issue	Possible Cause	Solution
Kettle Does Not Heat	A. Power to Unit B. Power to the Kettle C. Kettle Heat Switch D. Heating Element	A. Make sure the lead-in cord is plugged in. B. Make sure the kettle lead-in cord is plugged in. C. Have a qualified service person check the voltage to and from the Kettle Heat switch; and if the switch is defective replace it. D. Heating element in the kettle may be burned out. Check with a qualified service person for inspection/repair.
Long Popping Cycles (Longer than 4 minutes for Salt Popcorn)	A. Low Voltage B. Inadequate Supply Lines C. Inferior Corn	A. If the machine is operated on low voltage, this could cause the kettle not to reach the proper operating temperature. Voltage with kettle turned on, should be at least 112 V (215 V for Export Models). Check with a qualified electrician. The use of extension cords is not recommended due to safety concerns, and may cause sacrificed and/or reduced performance. If the use of an extension cord cannot be avoided then be sure it is no longer than 10 to 12 ft., and is at least 14 AWG (1.5mm ² wire for Export Models). B. Inadequately sized electrical supply lines, in addition to being a fire hazard, would also prevent the kettle from reaching the proper operating temperature. Check with a qualified electrician. C. Inferior quality corn would result in longer popping cycles. Use only top quality hybrid popcorn from reputable suppliers. Even then, if you let your corn pick up moisture or dry out, your popping cycles will be slow.
Kettle Agitator Shaft not Rotating	A. Kettle Motor Switch B. Kettle Agitator Shaft/Stir Blade not rotating. (Unit must be OFF, unplugged and cool prior to checking or adjusting the agitator assembly.)	A. If the kettle agitator shaft is not rotating, DO NOT pop corn. Make sure the Kettle Motor Switch is ON. If the switch is ON, and the shaft is not rotating, the switch or motor may be faulty, contact qualified service personnel for inspection/repair. B. If the kettle agitator shaft is not rotating, DO NOT pop corn. Check the clearance between the kettle bottom and the stir blade; it should be 1/32" (use a dime). To adjust, loosen the set screw in the collars above and below the crossbar and adjust the agitator shaft as necessary. Then re-tighten the set screws in the collars.

MAINTENANCE INSTRUCTIONS

	 DANGER
	<p>Machine must be properly grounded to prevent electrical shock to personnel. Failure to do so could result in serious injury, or death. DO NOT immerse any part of this equipment in water. DO NOT use excessive water when cleaning. Keep cord and plug off the ground and away from moisture. Always unplug the equipment before cleaning or servicing. Make sure all machine switches are in the OFF position before plugging the equipment into the receptacle.</p> <p>008_051514</p>

	 DANGER
	<p>Improper installation, adjustment, alteration, service, or maintenance can cause property damage, injury, or death. Any alterations to this equipment will void the warranty and may cause a dangerous condition. This appliance is not intended to be operated by means of an external timer or separate remote-control system. NEVER make alterations to this equipment. Read the Installation, Operating, and Maintenance Instructions thoroughly before installing, servicing, or operating this equipment.</p> <p>014_020416</p>

	 WARNING
	<p>No user serviceable parts inside. Refer servicing to qualified service personnel.</p> <p>011_051514</p>

	 CAUTION
	<p>THE FOLLOWING SECTIONS OF THIS MANUAL ARE INTENDED ONLY FOR QUALIFIED SERVICE PERSONNEL WHO ARE FAMILIAR WITH ELECTRICAL EQUIPMENT. THESE ARE NOT INTENDED FOR THE OPERATOR.</p> <p>027_010914</p>



ORDERING SPARE PARTS

1. Identify the needed part by checking it against the photos, illustrations, and/or parts list.
2. Use only approved replacement parts when servicing this unit.
3. When ordering, please include part number, part name, and quantity needed.
4. Please include your model number, serial number, and date of manufacture (located on the machine nameplate/data plate) with your order.
5. Address all parts orders to:

Parts Department
Gold Medal Products Co.
10700 Medallion Drive
Cincinnati, Ohio 45241-4807

Or, place orders by phone or online:

Phone: (800) 543-0862
(513) 769-7676
Fax: (800) 542-1496
(513) 769-8500
E-mail: info@gmpopcorn.com
Web Page: gmpopcorn.com



Replacing Broken Glass


Broken glass panels can be easily replaced. Gold Medal Products Co. does not ship glass. It can be obtained from a local glass shop and always purchase tempered glass.

1. Remove all loose pieces of glass.
2. Remove all rigid glass channels from around the glass to be replaced. Set it aside as it must be reused.
3. Carefully remove the rest of the broken glass.
4. Apply decals (if desired) to the new glass panel.
5. Slide rigid glass channels over the exposed sides and bottom of new glass panel.
6. Fasten new glass panel in machine with the existing glass strips. (On some units, the front and side glass slide under top and is then lowered into the bottom channel.)

GLASS DIMENSIONS (Width X Height X Thickness)


Front/Side Glass: 16 7/8" X 21 1/4" X 1/8" (3 Pieces)

8 oz. Kettle Assembly (49472N, 49472EXN) – Agitator Assy. View

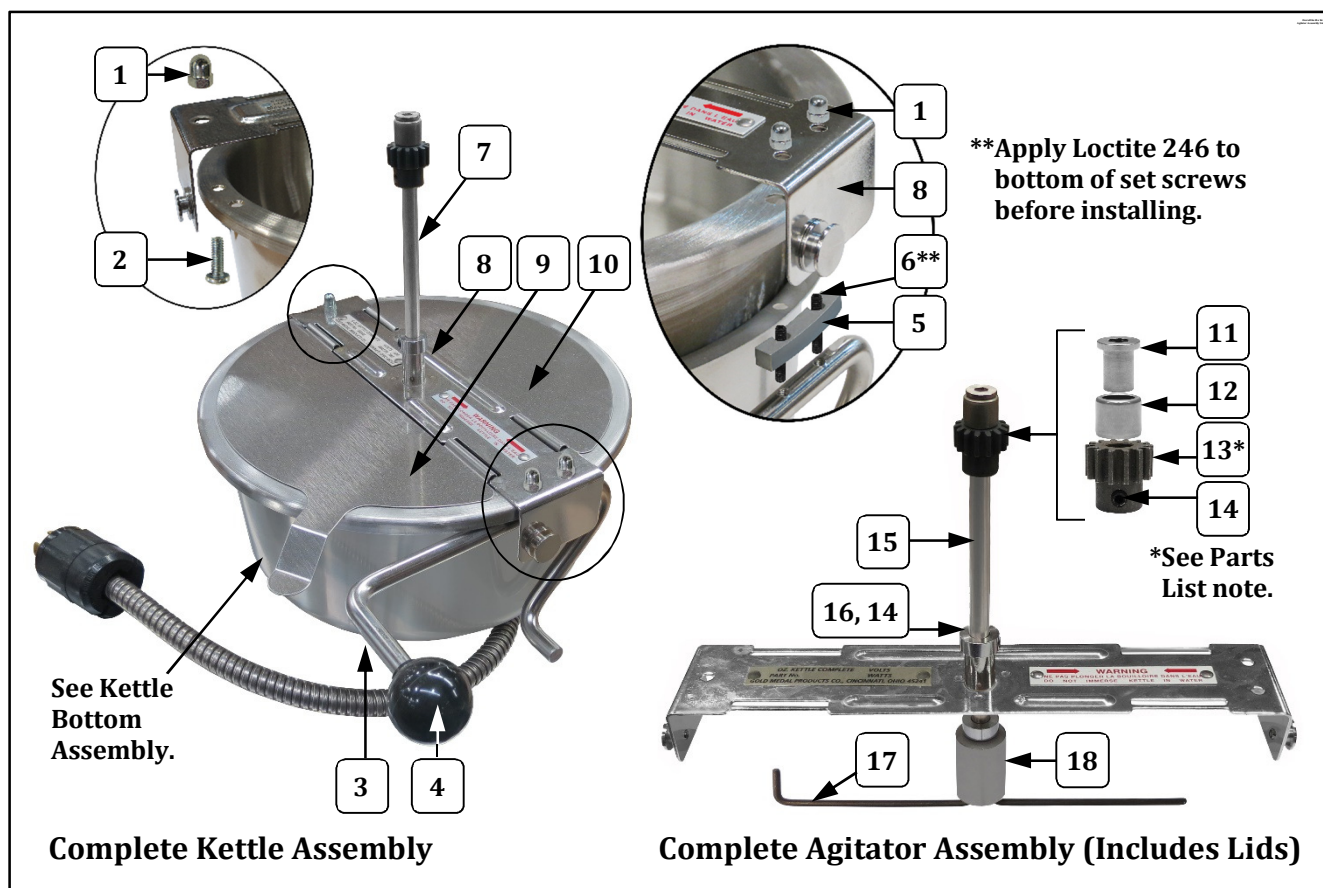


Item	Part Description	Part Number	
		49472N	49472EXN
1	ACORN NUT	47702	47702
2	8-32 X 1/2 PHIL PAN M/S	47141	47141
3	DUMP HANDLE RH	49314	49314
4	DUMP HANDLE KNOB	47110	47110
5	SPACER (For Dump Handle)	49362	49362
6	8-32 X 1" SET SCREW	77933	77933
7	LID & AGITATOR ASSY (Complete Assembly)	49906N	49906EXN
8	KETTLE CROSSBAR ASSEMBLY	49907N	49907EXN
9	FRONT LID W/FORMED LIFTER	49017	49017
10	REAR KETTLE LID	49016	49016
11	AGITATOR BEARING HUB	43434	43434
12	NEEDLE BEARING	47106	47106
13*	SPUR GEAR KIT (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K	47059K
14	SET SCREW #10-32 X 3/16	41742	41742
15	6 OZ. AGITATOR SHAFT	69710	69710
16	SET COLLAR 5/16 ID 5/8 OD	46649	46649
17	6 OZ. STIR ROD	69714	69714
18	AGITATOR WEIGHT	69715	69715

8 oz. Kettle Assembly (49472N) – Kettle Bottom Assembly

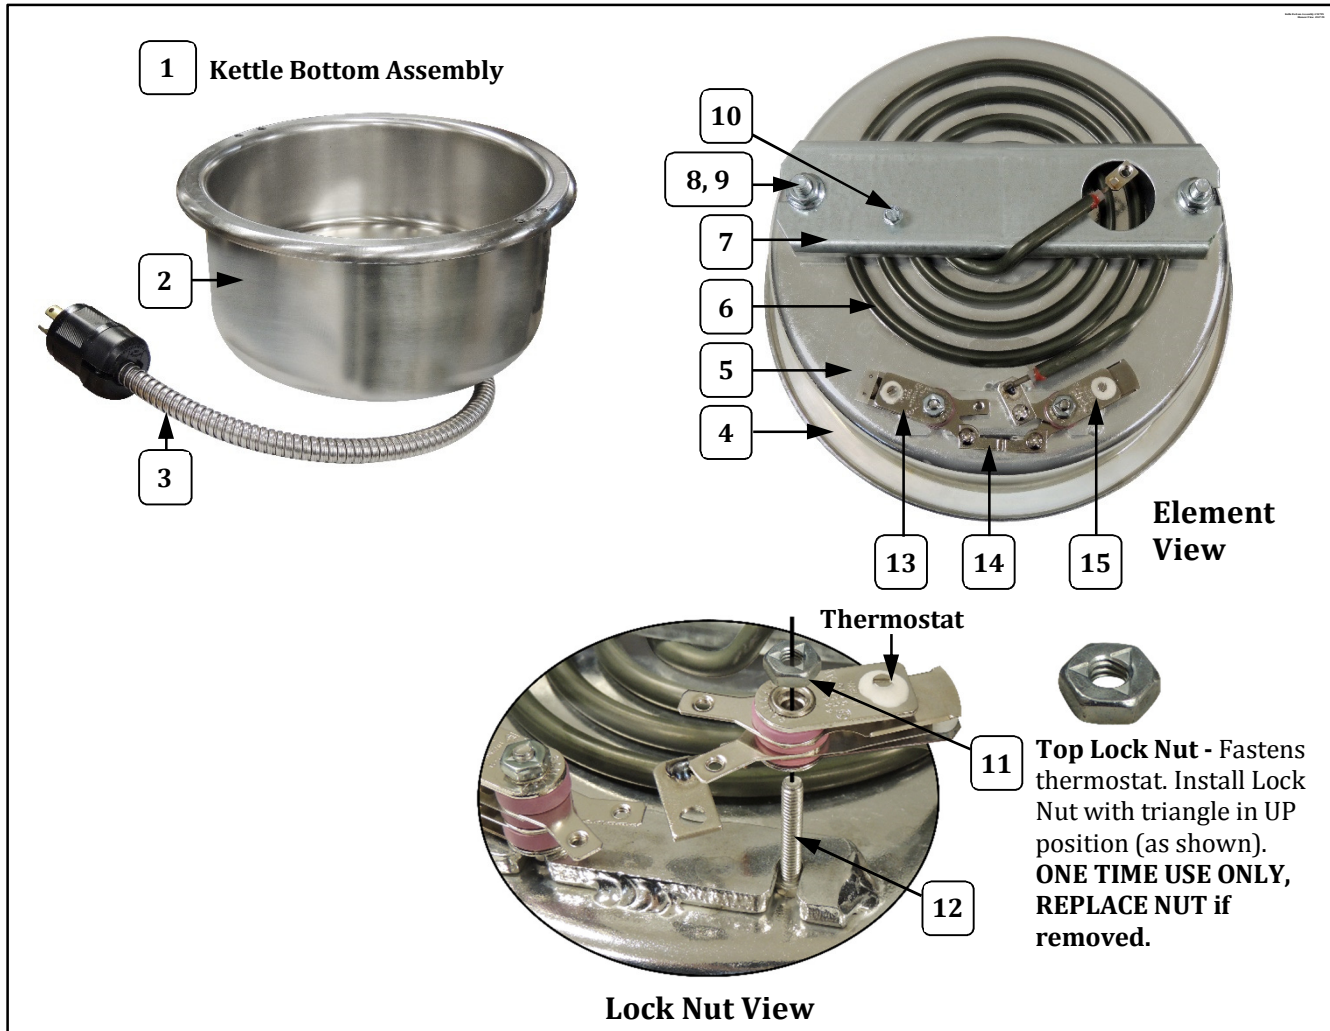

Item	Part Description	Part Number
		49472N
1	8 OZ. KETTLE BOTTOM ASSEMBLY (Complete Assembly - includes parts listed below)	49489N
2	KETTLE SHELL	49431
3	KETTLE LEAD ASSEMBLY	49328
4	6 OZ. KETTLE GASKET	49368
5	6 OZ. CLAD KETTLE	49596
6	HEAT ELEMENT 120V, 1125W	49529
7	ELEMENT CLAMP	49532
8	5/16-18 SERRATED LOCK NUT	49317
9	5/16-18 X 3/4 SQUARE HEAD BOLT	49446
10	8-32 X 1/4 SLT. HWH M/S (fastens ground)	49060
11	8-32 TOP LOCK NUT (always replace if removed)	67943
12	8-32 x 1 SS HEX SC (holds Thermostat)	49076
13	450°F THERMOSTAT (includes two 6-32 Screws)	76089
14	THERMOSTAT SHUNT BAR	47193
15	525°F THERMOSTAT (includes two 6-32 Screws)	76702


8 oz. Kettle Assembly (49472EXN) – Kettle Bottom Assembly

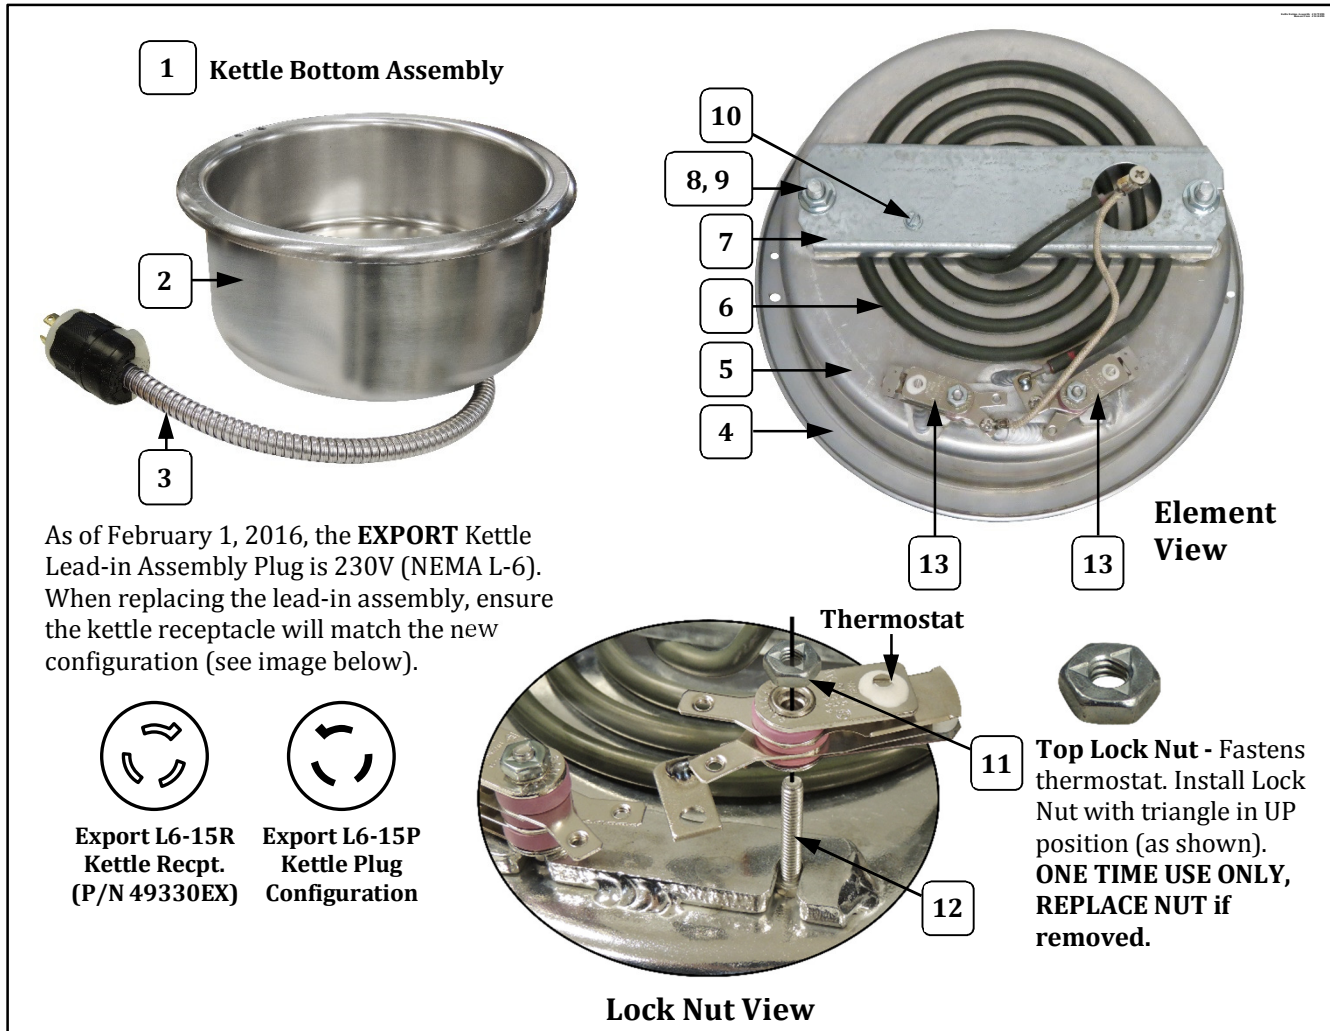

Item	Part Description	Part Number
		49472EXN
1	8 OZ. KETTLE BOTTOM ASSEMBLY (Complete Assembly - includes parts listed below)	49489EXN
2	KETTLE SHELL	49431
3	KETTLE LEAD ASSEMBLY	49490
4	6 OZ. KETTLE GASKET	49368
5	6 OZ. CLAD KETTLE	49596
6	230V 1125W HEAT ELEMENT	49578
7	ELEMENT CLAMP	49532
8	5/16-18 SERRATED LOCK NUT	49317
9	5/16-18 X 3/4 SQUARE HEAD BOLT	49446
10	8-32 X 1/4 SLT. HWH M/S (fastens ground)	49060
11	8-32 TOP LOCK NUT (always replace if removed)	67943
12	8-32 x 1 SS HEX SC (holds Thermostat)	49076
13	450°F THERMOSTAT (includes two 6-32 Screws)	76089



Cabinet Exterior – Front View

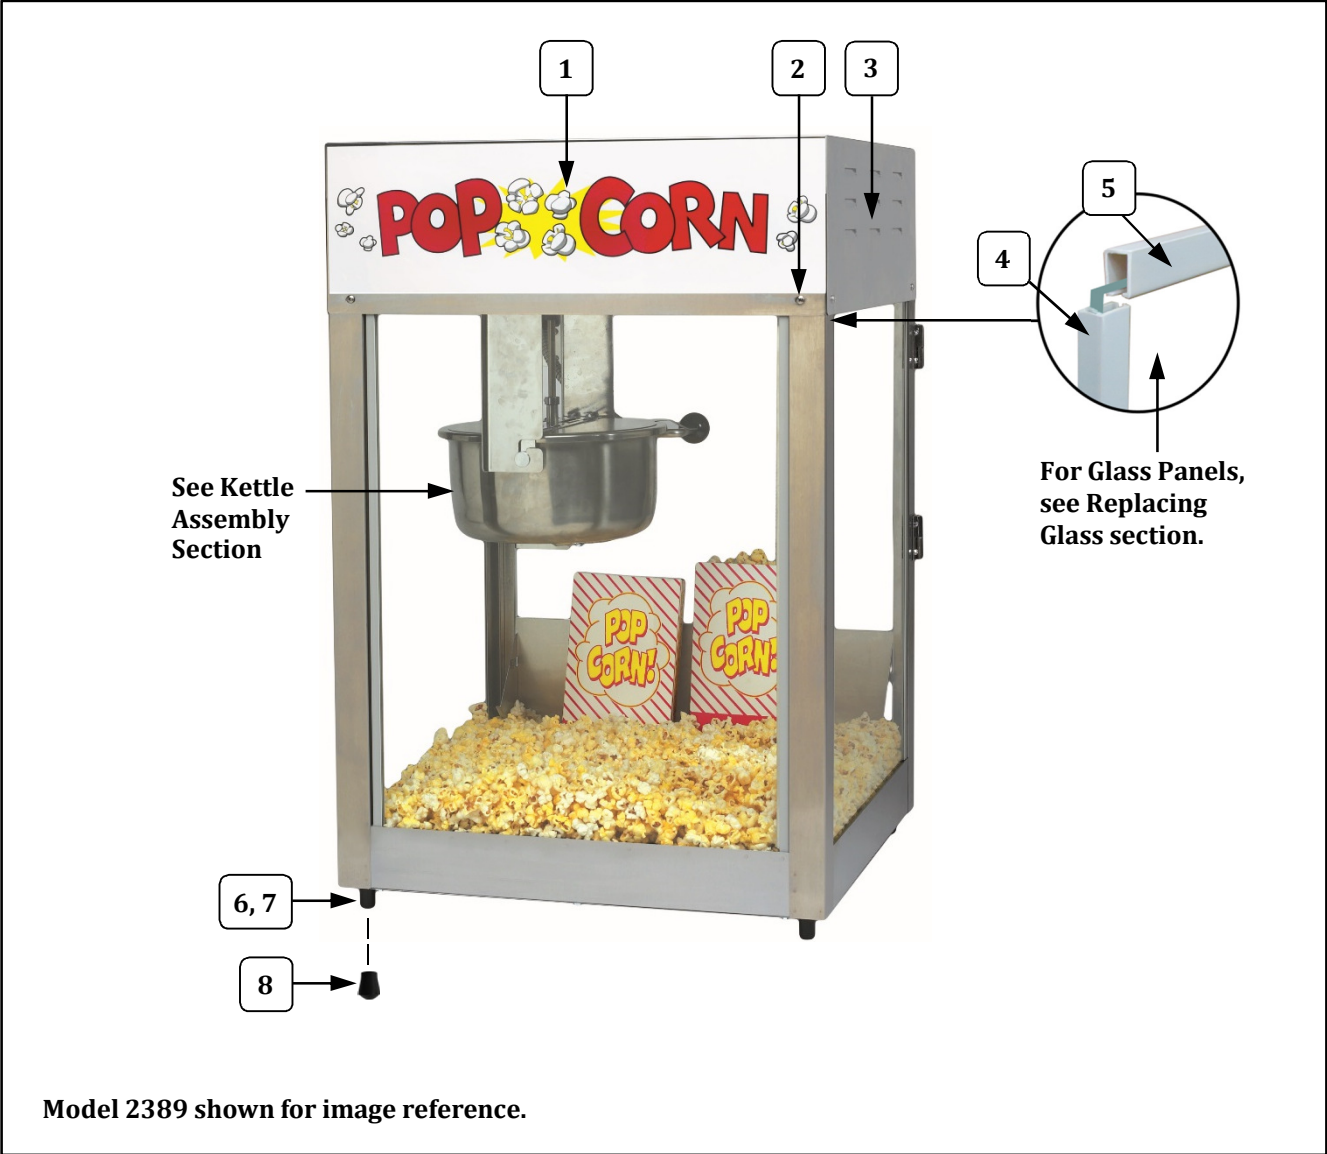


Model 2389 shown for image reference.

Item	Part Description	Part Number	
		2389	2389EX
1	POPCORN DECAL	49777	49777
2	8-32 X 3/8 SLT. HWH M/S	42044	42044
3	NON LIGHTED DOME	77769	77769
4	21 5/16 GLASS CHANNEL (used on sides of glass panels)	49844	49844
5	16 1/4 GLASS CHANNEL (used on top and bottom of glass panels)	74172	74172
6	GLIDE	47328	47328
7	10-24 X 3/4 HEX HD	41314	41314
8	CRUTCH TIP BLACK 70 DURO	49123	49123

Cabinet Exterior – Rear View

****Complete Door Hardware Kit
(See next page for individual
component breakdown).**

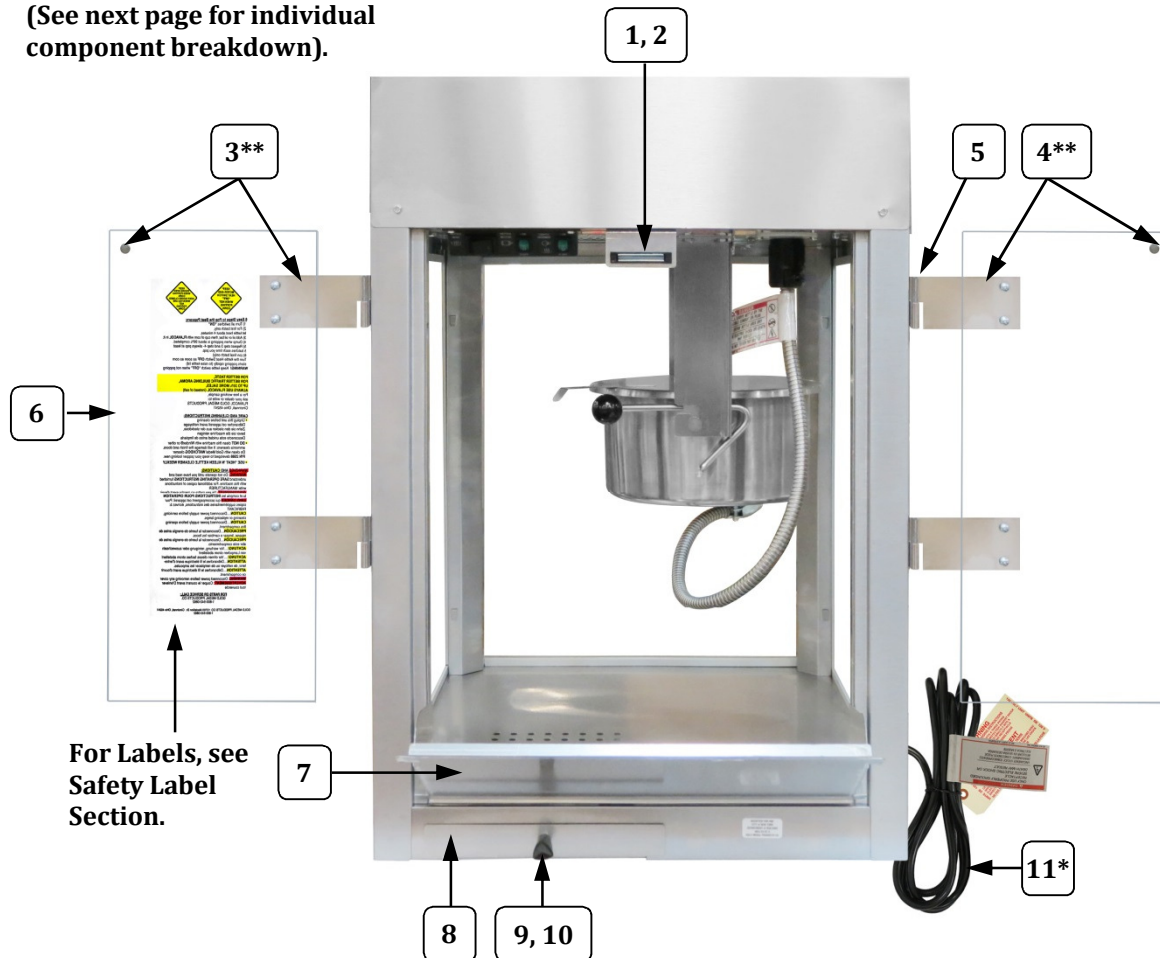

*** CAUTION: If supply cord is damaged, it must be replaced by Gold Medal Products Co., its service agent, or similarly qualified persons in order to avoid a hazard.**

Item	Part Description	Part Number	
		2389	2389EX
1	MAGNETIC CATCH	47561	47561
2	MAGNETIC CATCH BRACKET	41340	41340
3	COMPLETE LH DOOR HARDWARE KIT	47054	47054
4	COMPLETE RH DOOR HARDWARE KIT	47055	47055
5	8-32 X 1/2 PHIL PAN M/S (Fastens male hinges to the corner posts)	47141	47141
6	DOOR	77774	77774
7	DROP PANEL	77730	77730
8	OLD MAID PAN	49100	49100
9	LID LIFT KNOB	47120	47120
10	8-32" X 3/8" PH PAN W/SEMS	42227	42227
11	POWER SUPPLY CORD	87085	42369




Door Hardware Kits – Individual Component Breakdown

Complete Left Hand Door Hardware Kit (P/N 47054)
(contains all parts shown above)

Complete Right Hand Door Hardware Kit (P/N 47055)
(contains all parts shown above)

Item	Part Description	Part Number	
		47054	47055
1	DOOR KNOB	41013	41013
2	8-32 X 1/2 SCREWS PH PAN W/SEMS	47124	47124
3	ACORN NUT #8-32	47702	47702
4	TEE BOLT	75267	75267
5	MALE HINGE SHORT LEFT	41349	
6	FEMALE HINGE LONG LEFT	41352	
7	FEMALE HINGE LONG RIGHT		41351
8	MALE HINGE SHORT RIGHT		41350


Cabinet Interior – Controls View

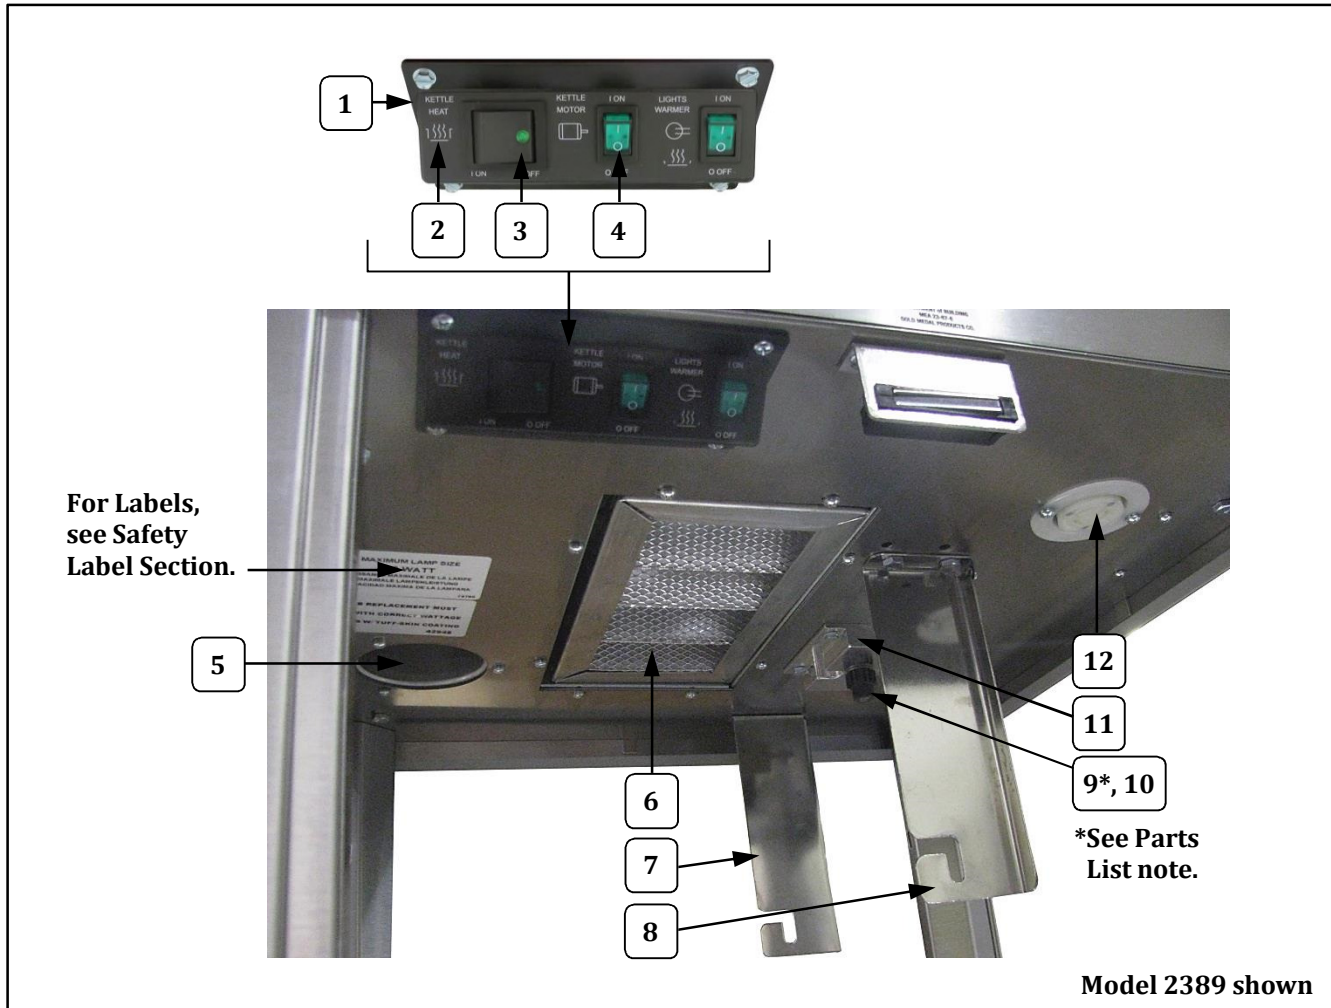

Item	Part Description	Part Number	
		2389	2389EX
1	SMALL SWITCH BOX	48501	48501
2	SMALL SWITCH LABEL	48502	48502
3	GREEN LIGHTED ROCKER SWITCH	42798	42798
4	DPST ROCKER SWITCH	42532	42532
5	50 WATT COATED FLOOD	42947	
	40 WATT COATED FLOOD		13122
6	5 X 10 X 2 FILTER	69850	69850
7	REAR HANGER ARM	49009	49009
8	FRONT HANGER ARM	49010	49010
9*	SPUR GEAR KIT (Includes 2 gears with set screws. Always replace Agitator Spur Gear and Kettle Drive Motor Gear as a set.)	47059K	47059K
10	SET SCREW #10-32 X 3/16	41742	41742
11	GEAR BLOCK	67194A	67194A
12	15 AMP TWIST LOCK KETTLE RECPT	49330	
	KETTLE LEAD-IN RECEPTACLE (reference Kettle Bottom Assy. for kettle plug configuration note)		49330EX




Cabinet Bottom – Corn Pan Element View

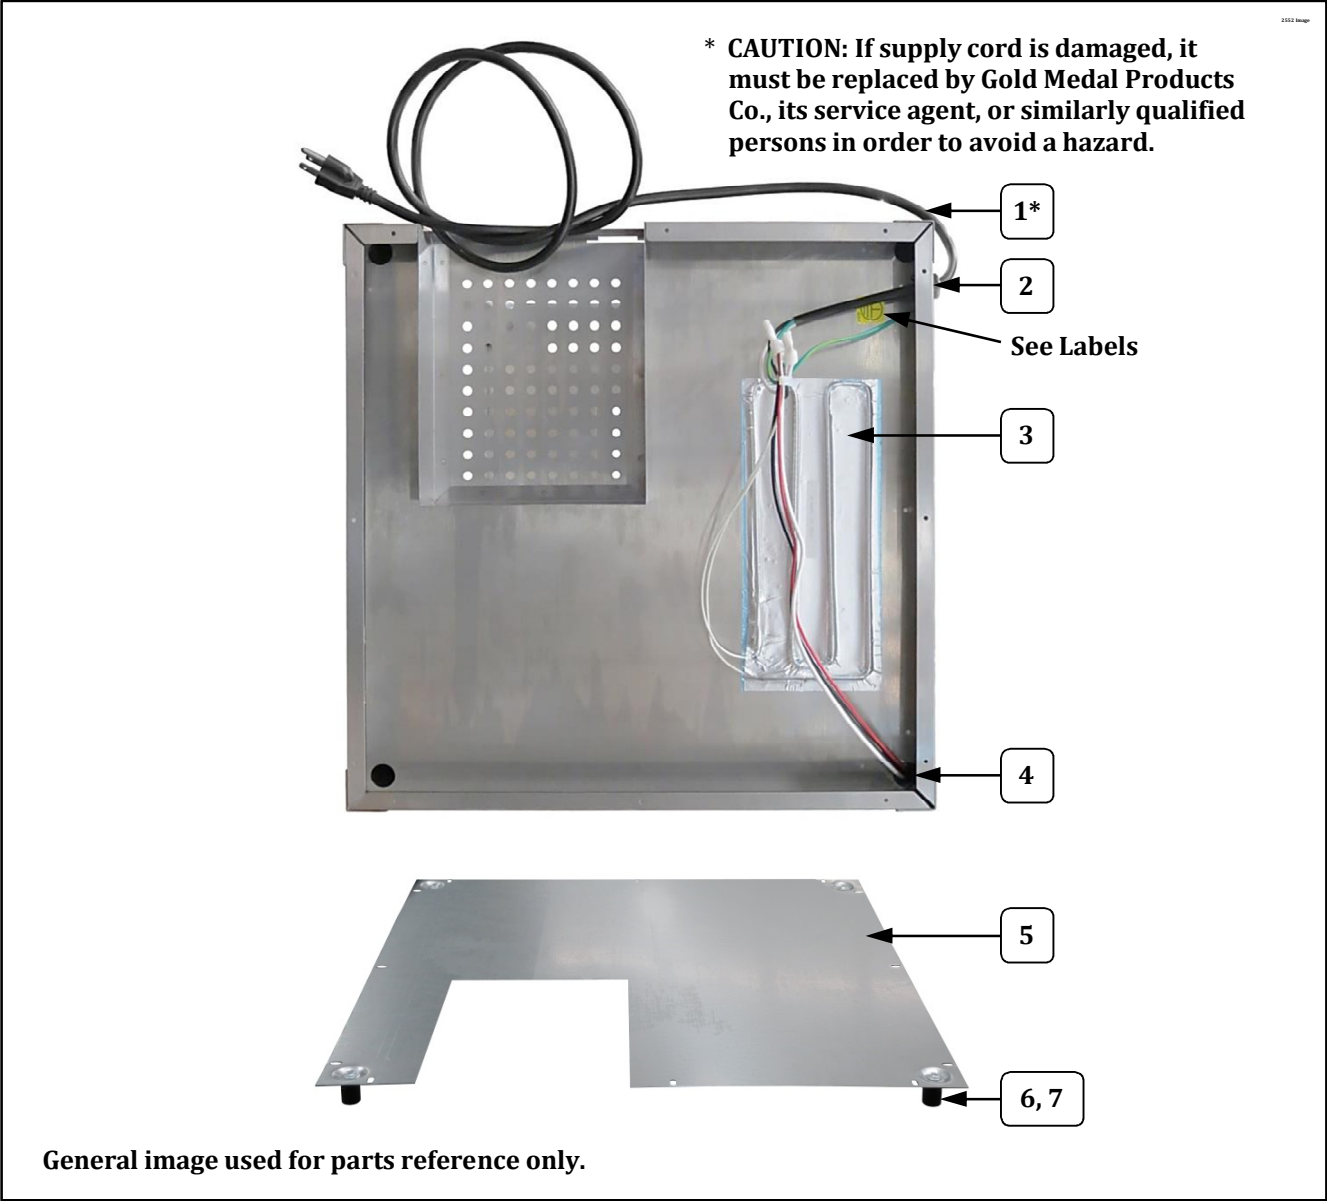

Item	Part Description	Part Number	
		2389	2389EX
1	LEAD IN CORD 15 AMP PLUG	87085	
	EXPORT POWER SUPPLY CORD		42369
2	STRAIN RELIEF	67060	67060
3	120 VOLT FOIL HEATER	40557	
	230 VOLT FOIL HEATER		40557EX
4	.875 SNAP BUSHING	45396	45396
5	BOTTOM COVER	49838	49838
6	GLIDE	47328	47328
7	10-24 X 3/4 HEX HD	41314	41314




Motor Plate Assembly

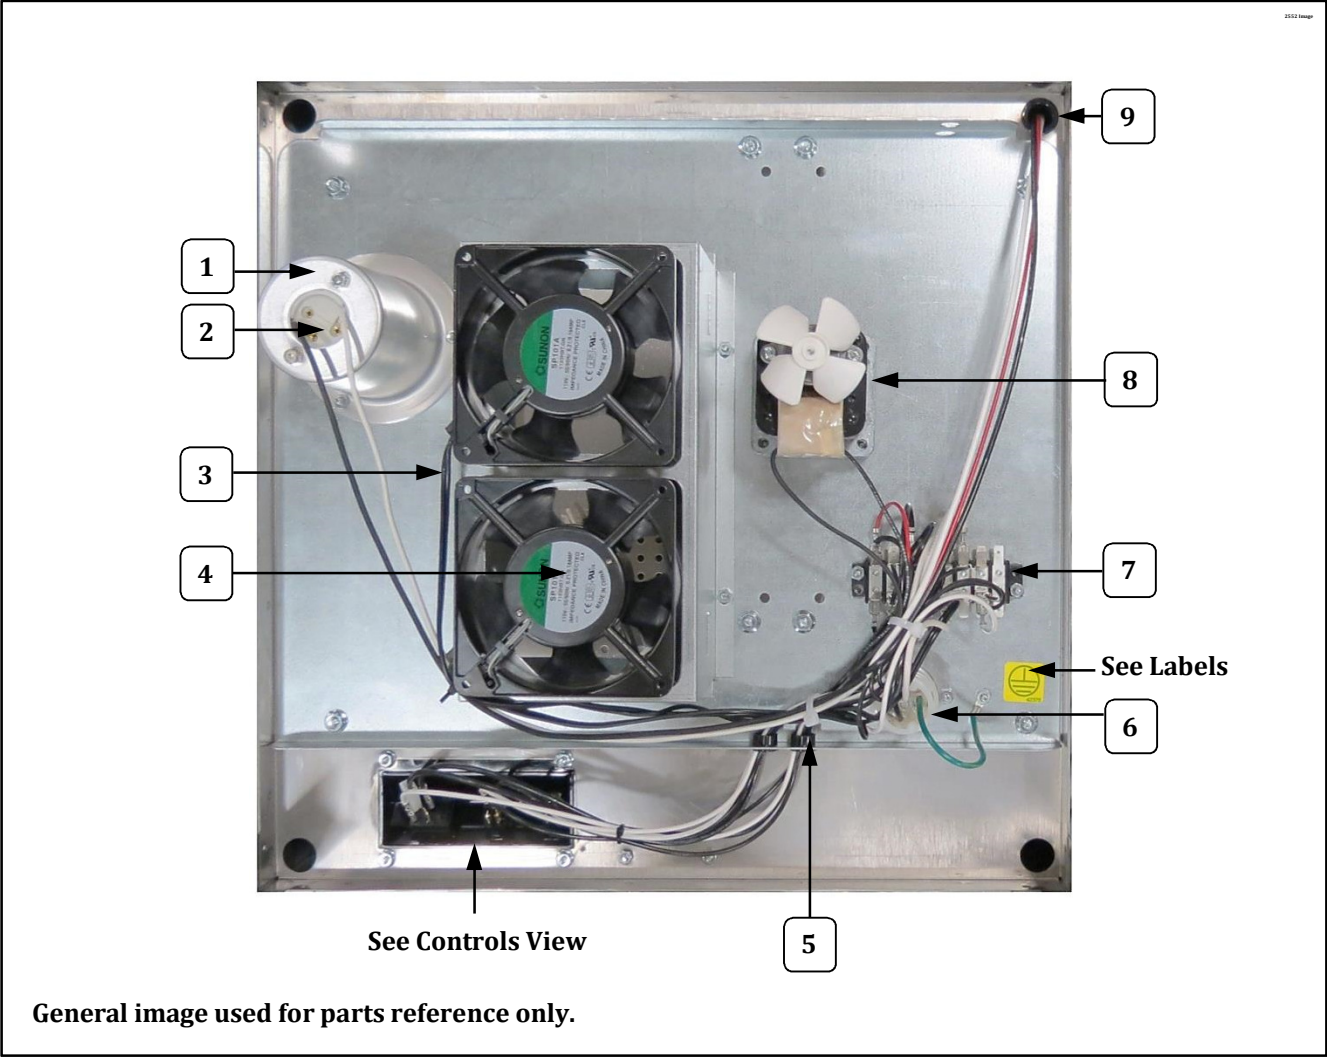

Item	Part Description	Part Number	
		2389	2389EX
1	LIGHT SHIELD CONICAL	40589	40589
2	LAMP HOLDER	47047	47047
3	BLOWER PLUG AND CORD	47199	47199
4	EXHAUST BLOWER	48018	
	EXHAUST BLOWER 220V,50CY		48037
5	.875 SNAP BUSHING	45396	45396
6	15 AMP TWIST LOCK KETTLE RECPT	49330	
	KETTLE LEAD-IN RECEPTACLE (reference Kettle Bottom Assy. for kettle plug configuration note)		49330EX
7	TERMINAL BLOCK	47208	47208
8	120 VOLT KETTLE DRIVE MOTOR	47038	
	230 VOLT KETTLE DRIVE MOTOR		47067
9	.625 SNAP BUSHING	47282	47282


Safety Labels

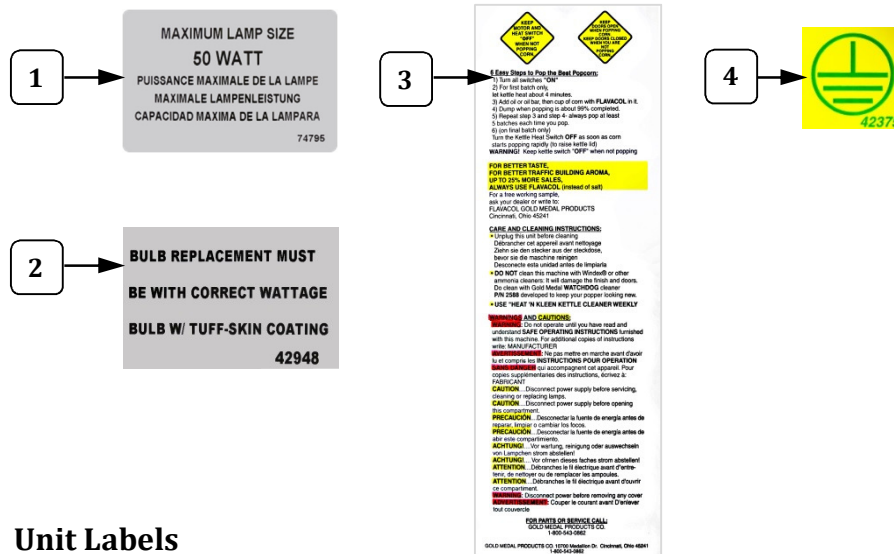

Unit Labels



Kettle Lead In Label

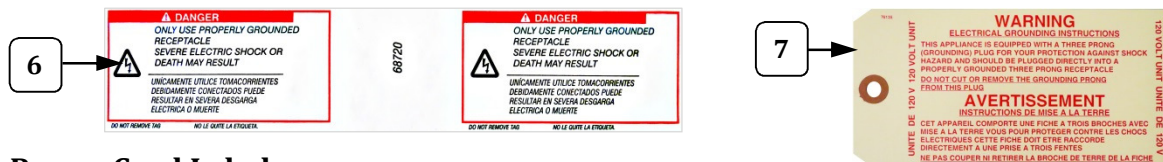

Power Cord Labels

Item	Part Description	Part Number	
		2389	2389EX
1	WARNING, MAX LAMP 50W	74795	
2	COATED BULB LABEL	42948	42948
3	UNIVERSAL POPPER DECAL	41019	41019
4	MAIN GROUND LABEL	42375	42375
5	CONDUIT WARNING LABEL	82840	82840
6	WARNING LABEL CORD	68720	68720
7	TAG.POWER CORD	76135	




Accessories



Item	Part Description	Part Number	
		2389	2389EX
1	MEASURE ONE CUP	47147	47147
2	6.5 CC MEASURE	47678	47678
3	OIL MEASURE (1/3 CUP)	47150	47150
4	STAMPED ALUMINUM SCOOP	2071	2071


Wiring Diagram

Model No. 2389

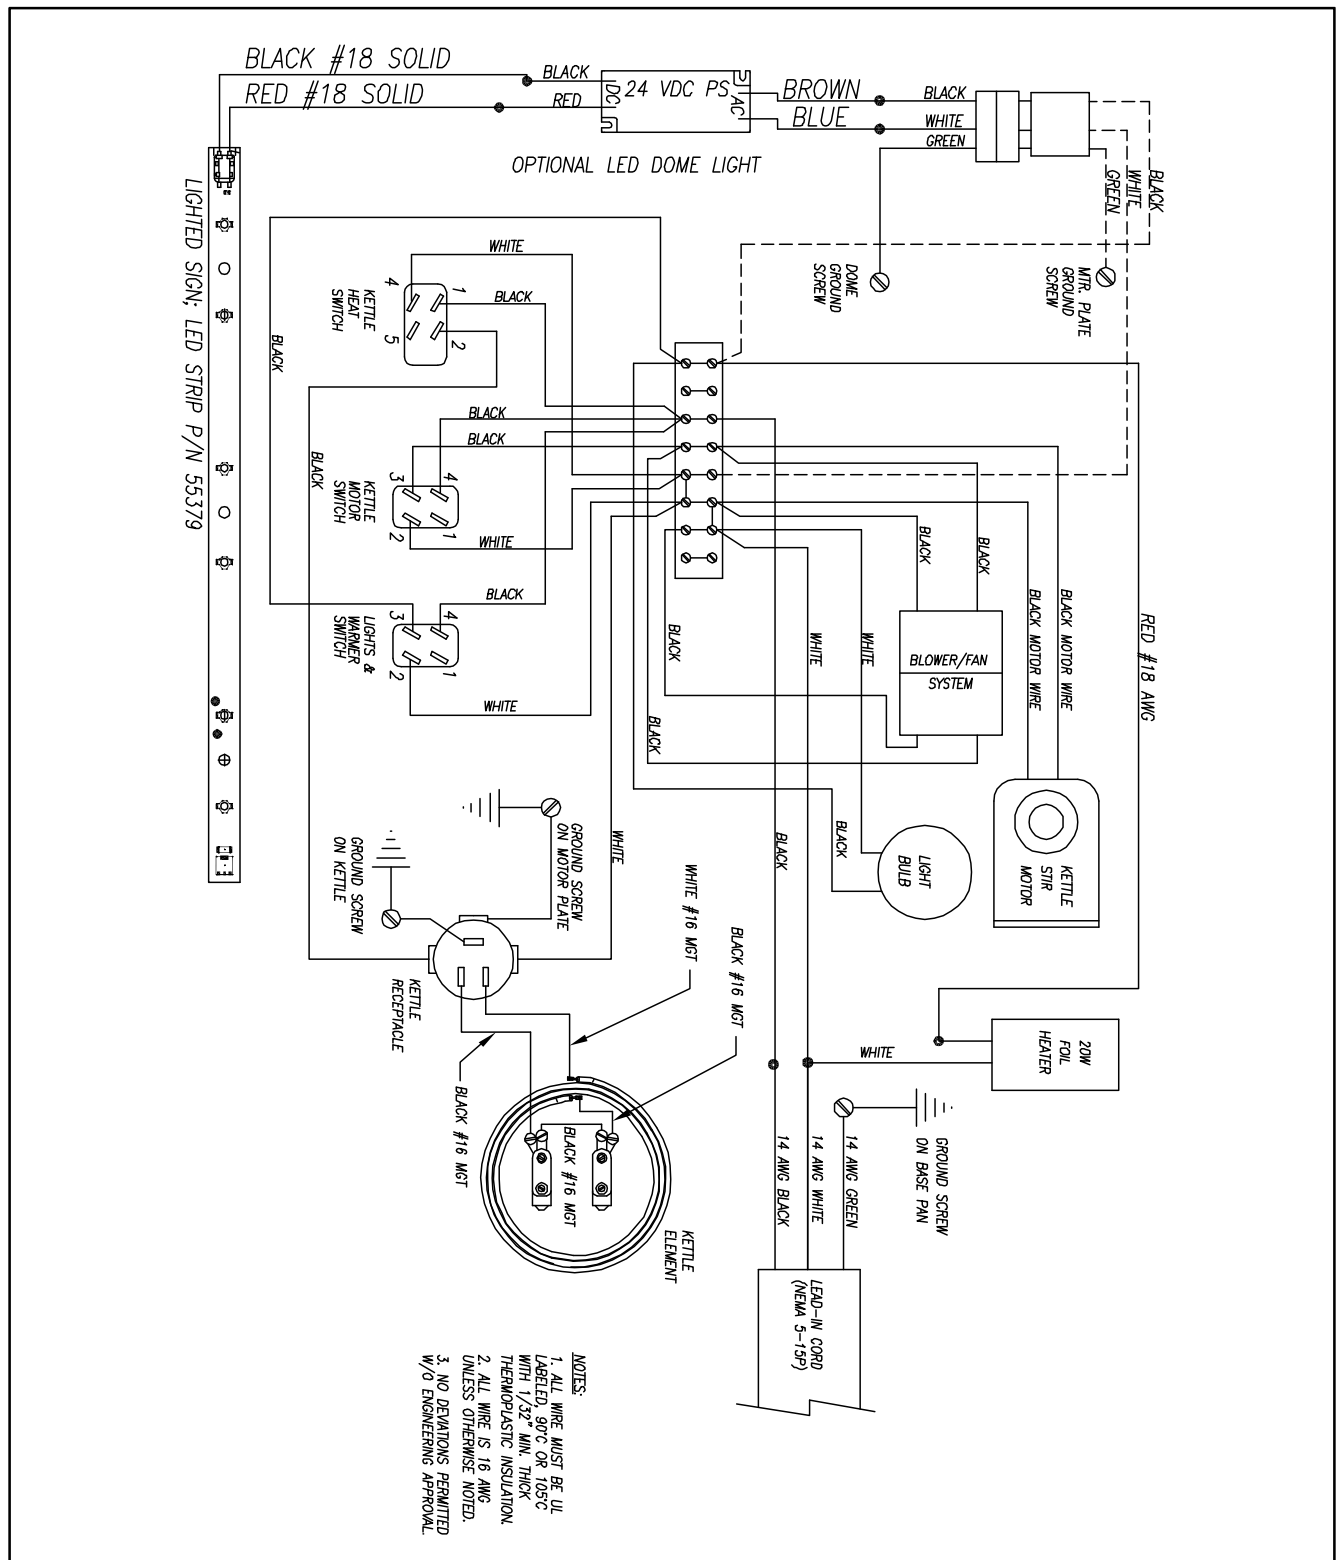



Model No. 2389EX

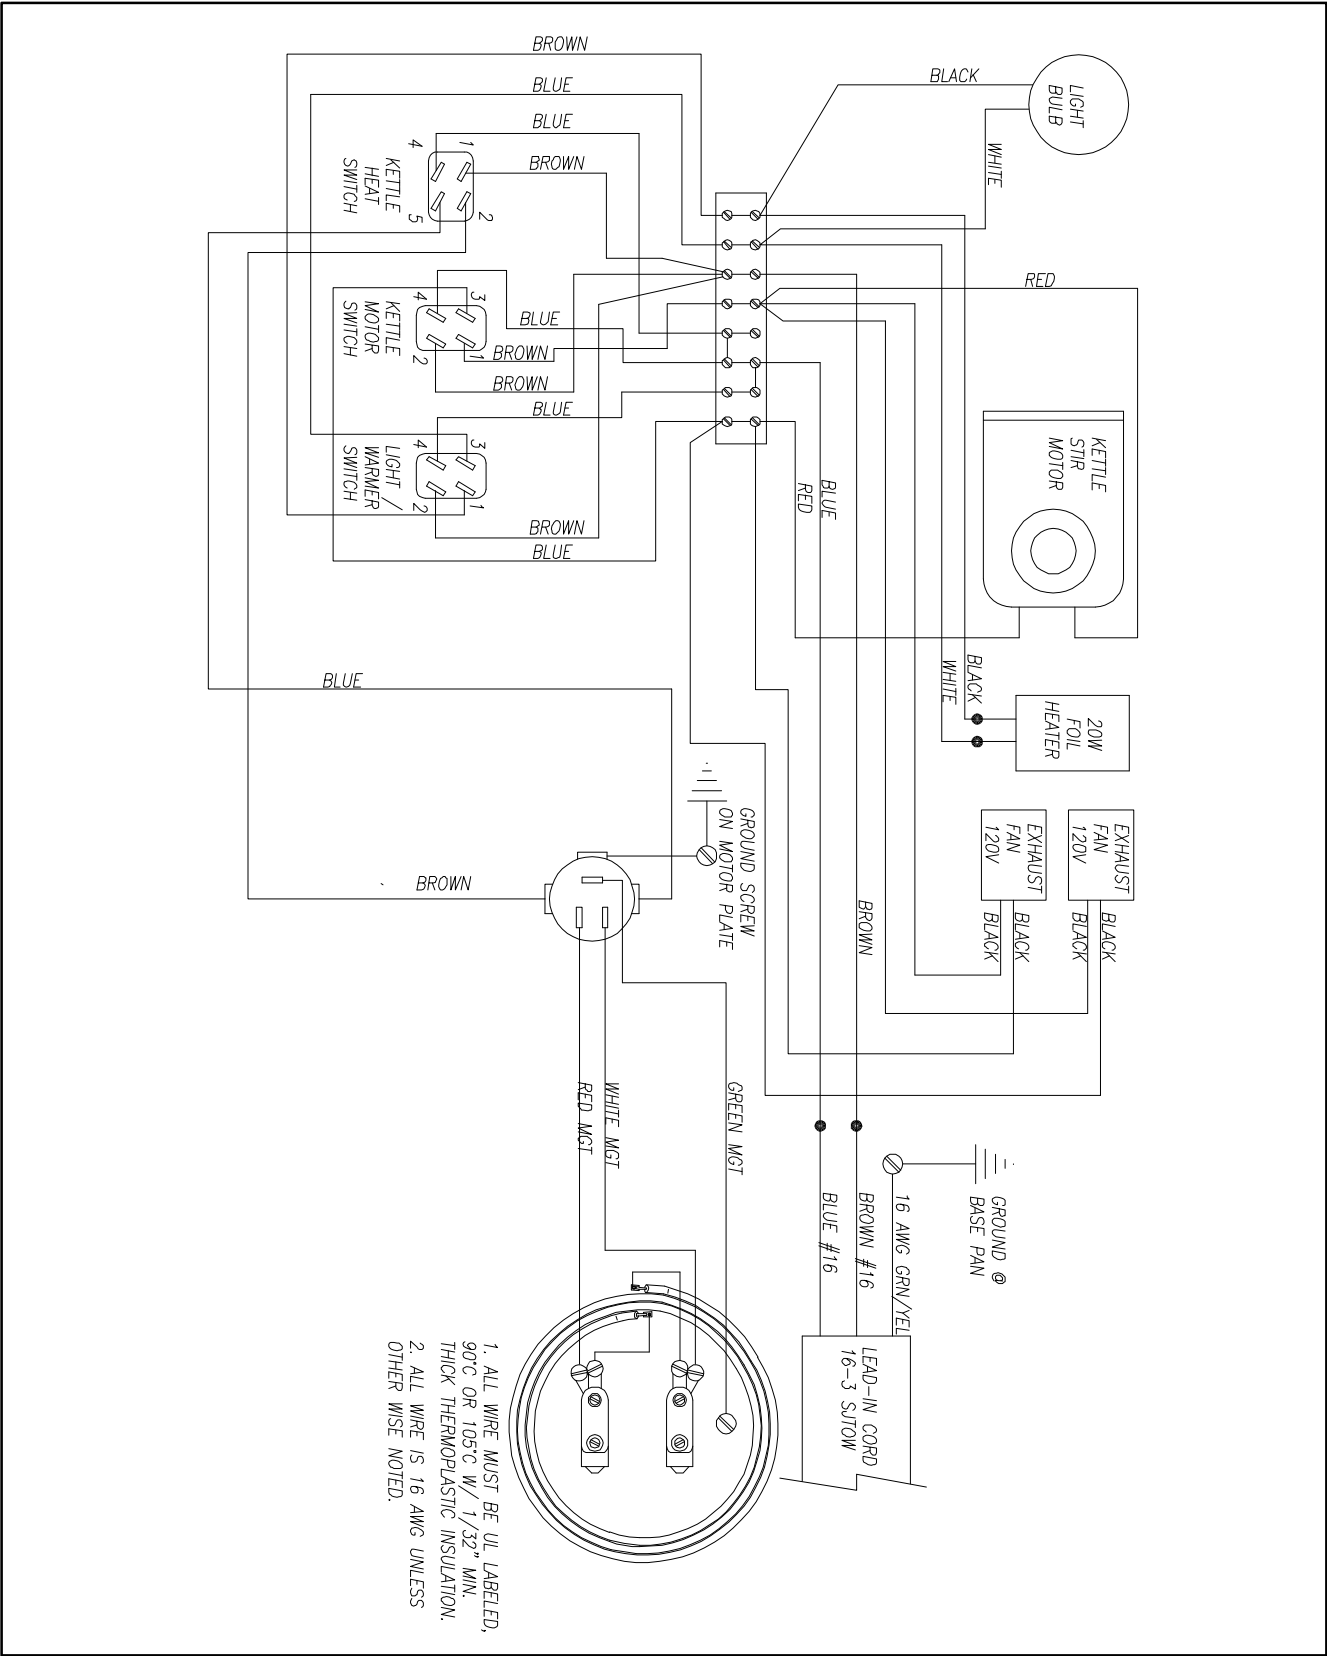



WARRANTY

Gold Medal Products Co. warrants to the original purchaser each item of its manufacture to be free of defects in workmanship and material under normal use and service. Gold Medal Products Co.'s obligation under this warranty is limited solely to repairing or replacing parts, f.o.b. Cincinnati, Ohio, which in its judgment are defective in workmanship or material and which are returned, freight prepaid, to its Cincinnati, Ohio factory or other designated point. Except for "Perishable Parts" on specific machines, the above warranty applies for a period of two (2) years from the date of original sale to the original purchaser of equipment when recommended operating instructions and maintenance procedures have been followed. These are packed with the machine. Parts warranty is two (2) years, labor is six (6) months.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES EXPRESSED OR IMPLIED, AND OF ALL OTHER OBLIGATIONS OR LIABILITIES ON OUR PART, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY. THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF. In no event shall Gold Medal Products Co. be liable for special, incidental or consequential damages. No claim under this warranty will be honored if the equipment covered has been misused, neglected, damaged in transit, or has been tampered with or changed in any way. No claim under this warranty shall be honored in the event that components in the unit at the time of the claim were not supplied or approved by Gold Medal Products Co. This warranty is effective only when electrical items have been properly attached to city utility lines only at proper voltages. This warranty is not transferable without the written consent of Gold Medal Products Co.

The term "Original Purchaser" as used in this warranty shall be deemed to mean that person, firm, association, or corporation who was billed by the GOLD MEDAL PRODUCTS CO., or their authorized distributor for the equipment.

THIS WARRANTY HAS NO EFFECT AND IS VOID UNLESS THE ORIGINAL PURCHASER FIRST CALLS GOLD MEDAL PRODUCTS CO. AT 1-800-543-0862 TO DISCUSS WITH OUR SERVICE REPRESENTATIVE THE EQUIPMENT PROBLEM, AND, IF NECESSARY, FOR INSTRUCTIONS CONCERNING THE REPAIR OR REPLACEMENT OF PARTS.

NOTE: This equipment is manufactured and sold for commercial use only.



GOLD MEDAL[®] PRODUCTS CO.

10700 Medallion Drive, Cincinnati, Ohio 45241-4807 USA

gmpopcorn.com

Phone: (800) 543-0862 Fax: (800) 542-1496
(513) 769-7676 (513) 769-8500