

Instruction Sheet

K00523 Touchless Lever Activated Ice Chute

CONVERT PUSH FOR ICE TO TOUCHLESS


1. Disconnect the power from the dispenser by unplugging the power cord from the electrical outlet.
2. Using a phillips head screwdriver, remove the two screws located on both sides of the ice chute.



3. With the screws out remove the front panel by grasping both sides and pulling towards you until it is clear of the ice chute, then pull the panel up and out.



4. Remove the metal outer bracket clip, then use your thumbs to spread the bracket and unhinge the ice chute from the bracket pins.

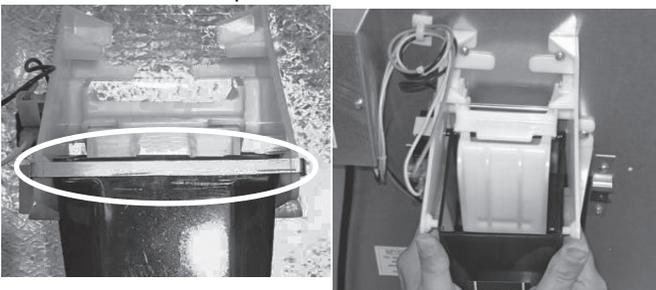

5. Lift the door lock and rotate the ice chute clockwise while pulling towards you in a slightly downward motion to complete removal.



6. Put the new ice chute into place by lifting the door lock and door lock assembly. Rotate the chute counter clockwise in an up and away from you motion and snap the bracket pins into place. Replace the metal bracket clip.



7. As you lift the front panel up onto the lower brackets, slide the chute through the opening in the front panel. Rest the panel on the lower brackets.



8. The Touchless ice chute is now secured. The front panel can now be pushed all the way into place.
9. Once the front panel is pushed all the way back into it's final position, replace the two screws on both sides of the Touchless ice chute.
10. Assemble the wire onto the chute - gently pinch the wire inward and slide it up inside the ice chute until it notches into the two side holes drilled near the top of the chute.
11. Plug unit back in for operation.
12. Test the operation of the dispenser by pushing ice chute to dispense ice.

