

### GENERAL INFORMATION

- ☐ Easy To Assemble/Disassemble
- ☐ Little or No Maintenance
- ☐ Self Leveling Piston Action
- ☐ Lightweight, Simple Operation
- ☐ Reliable, Heavy Duty Construction
- ☐ Consistent Product Quality Economical
- ☐ Compact Easy Clean Up Easily Stored



MODEL#TK156

### OPERATION

Use the hook in the handle to remove plunger assembly. Turn cylinder assembly in a clockwise motion to remove from stand and place cylinder assembly on the three-fingered cylinder support.

Load 2½ pounds of meat in to the inner cylinder (this will be about 1" from rear of cylinder) and remove inner cylinder from outer cylinder.

Load 3½ pounds of masa into the outer cylinder (this will be about half full) and reinsert inner cylinder into outer cylinder.


Install cylinder assembly back on to the stand with a twisting motion and insert plunger assembly into cylinders.

Connect handle to the drive rod at the quick disconnect hook, Pull handle until mass and meat exit discharge nozzle together. The tamalemaker is now loaded.

Pull handle until desired length and pull tamale across nozzle and place on tray or on the corn husk.

## **TAMALEMAKER**

# The Perfect Tamale Machine!

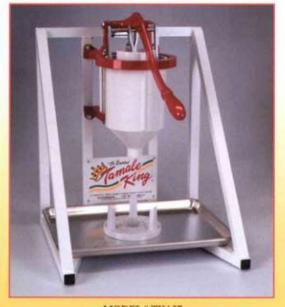

MODEL# TK157

### SPECIFICATIONS

Capacity - The Tamalemaker will hold 2½ lbs. of meat and 3½ lbs. of masa. The 7/8" nozzle will make 50 four-inch tamales. The 1" nozzle will make 40, and the 1½" cylinder will make 30. It takes approximately two minutes to empty the cylinders and approximately two minutes to reload.

Warranty - 90 day limited warranty guaranteed to be free from defects in material and workmanship.

**Construction** - Cylinders and plungers formed from food grade plastic.


Handle and base are cast metal.

Weight - 30 lbs. approximate

Shipping - F.O.B. Fort Worth, Texas









FOR MORE INFORMATION CALL OR WRITE:

#### C.T. BEAVERS CO.

4604 E. LANCASTER AVE. • FT. WORTH, TEXAS 76103 • (817) 534-3122 • FAX (817) 534-4887 • 1-800-531-1799

Go to www.TamaleKing.com and see the Tamalemaker in operation!

U.S. PATENT #5198239 MEXICAN PAT. #180282 CANADIAN PAT. #2059165